



# Zebra Wall Pad Installation



Wall pads can be installed using the channel method or the screw mounting method. For a professional, finished look to your wall pads, we recommend using the channel method. Please read through all of the instructions before starting the installation.

## CHANNEL MOUNT METHOD

### STEP 1

Gather necessary materials:

- Zebra Wall Pads
- “J Channel” pieces (included with kit)
- “Z Channel” (included with kit)
- Chalk line or laser level
- Tape measure
- Pencil
- Cordless drill
- Drywall screws for wood or steel studs (not included)
- Tap con screws for concrete (not included)

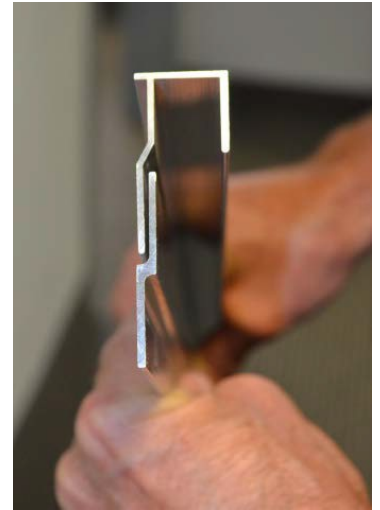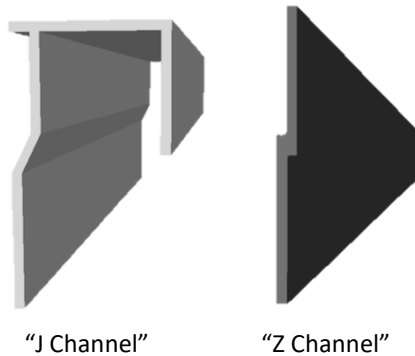


### STEP 2

Assemble the channels and wall pad:

- Set the “J Channel” in place over the top lip of one of the wall pads.
- Slide the Z-channel into the gap between the J-channel and the wall pad.

**NOTE:** This is for measuring purposes only. There will be excess channel on each side of the wall pad.

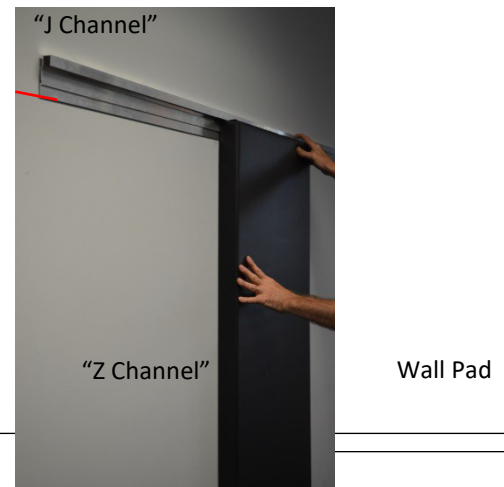

### STEP 3

Measure the placement of the wall pad on the wall:

- Set the assembled wall pad in place against the wall at the correct height.
- Mark the wall at the bottom of the Z-channel on both ends.
- Remove the wall pad and channels.
- Snap a chalk line or use a laser level to mark where the Z-channel will be attached to the wall.

**NOTE:** For elevated wall pads, there is an extra “J Channel” included with the kit. When measuring the placement of the wall pad, be sure to mark the wall for the placement of the “J Channel” at the bottom of themat.



Line →

## STEP 4


---

Attach the “Z Channel” to the wall:

- Place the “Z Channel” against the wall making sure the bottom of the channel is on the guideline.
- Fasten the “Z Channel” to the wall studs using the appropriate screws. Use the indentation on the “Z Channel” as a guideline for screw placement.

Attach the “J Channel” to the wall: **(For elevated wall pads only)**

- Using the guideline, place one of the “J Channels” against the wall where the bottom of the mat will rest.
- Fasten the “J Channel” to the wall studs using the appropriate screws. Use the indentation on the “J Channel” as a guideline for screw placement.

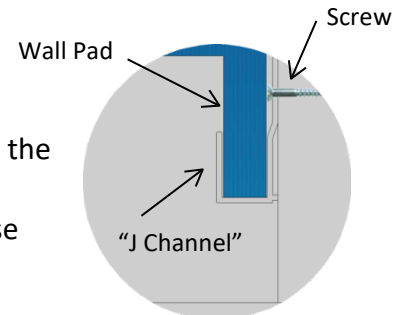


Elevated wall pad with “J Channel”

## STEP 5

---

Attach the wall pad to the wall:


- Set the wall pad in place against the “Z Channel.”
- Fasten the bottom lip of the wall pad to the wall studs using the appropriate screws.
- Set the “J Channel” in place over the top lip of the mat and the “Z Channel.”

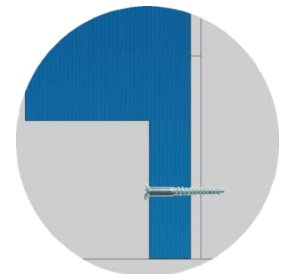

Wall pad at floor line

Attach the wall pad to the wall: **(For elevated wall pads only)**

- Place the bottom lip of the wall pad into the “J Channel.”
- Set the wall pad in place against the “Z Channel.”
- Set the remaining “J Channel” in place over the top lip of the mat and the “Z Channel.”

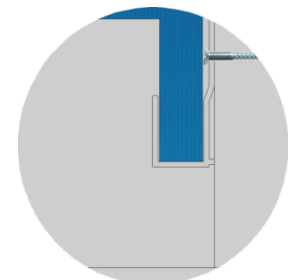

Elevated wall pad with “J Channel”

## SCREW MOUNT METHOD

### STEP 1

---

Gather necessary materials:


- Zebra Wall Pads
- Cordless drill
- Drywall screws for wood/steel studs (not included)
- Tap con screws for concrete (not included)

### STEP 2


---

Attach the wall pad to the wall:

- Set wall pad in place against the wall at the correct height.
- Fasten the top lip of the wall pad to the wall studs using the appropriate screws.
- Fasten the bottom lip of the wall pad to the wall studs using the appropriate screws.

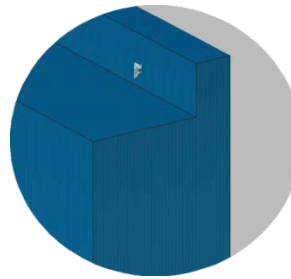

Top view

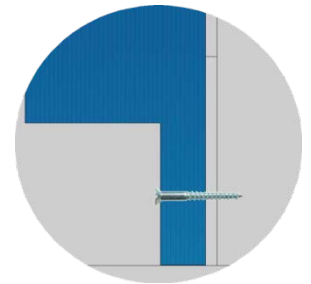

Bottom view